 


Extension ED module

XD-2AD2PT-A-ED

Fast manual

Thanks for purchasing XINJE XD series PLC and extension module. This manual will introduce the electric features and using method of XD series extension ED module. Please read this manual carefully before using the products, make sure the wiring operation is safe.



- > 2 channels analog input: current input mode, 0~20mA or 4~20mA.
- ≥ 2 channels PT100 temperature input: temperature range -100~500°C, precision
- > 12-bit high precision analog input
- As the special function ED module of XD, XD series PLC can connect 1 XD-2AD2PT-A-ED module.

Safety precautions

■ Control system design attentions



- ♦ Make sure design the safety circuit, to ensure that the control system can still work safety when the external power supply cut off or PLC broken.
- ◆ Make sure set emergency braking circuit, protection circuit, interlock circuit of forwardreverse running in PLC external circuit and upper-lower limit switch to prevent from machine damage
- ♦ In order to make the equipment safe operation, please design external protection circuit for important output signal
- ◆ PLC CPU will close all the output when detecting the system error; the output will lose control when the PLC circuit has problem. Please design suitable external control circuit to ensure the device working normally.
- ◆ If the PLC relay or transistor unit is broken, the output cannot be ON or OFF.
- ◆ The PLC is designed for indoor environment, the lightning protection must be installed in the power supply system to avoid PLC and other device damage.

■ Installation and wiring attentions



- ◆ Do not use the PLC in the following environment: dust, soot, corrosive gases, flammable gas, high temperature, condensation, vibration, impact, lightning, fire.
- Do not let the metal scrap and wire head drop into the ventilation hole of PLC, otherwise it will cause fire or error operation.
- ◆ Do not cover the ventilation hole of PLC, otherwise it will cause fire, error operation.
- ♦ The I/O wiring must be fixed enough, otherwise the bad contactor will cause fault.
- Attention!
- ♦ It can use external power supply for extension module DC24V power.
- Please use shield cable for high frequency I/O wiring to avoid interference.

Run and maintenance



- ◆ Please connect all the cable include PLC, extension module and BD board after shutting down the power supply.
- ◆ Please operate as the manual for online operation, forced output, RUN, STOP.



Product information

- Please discard the product as industrial waste.
- ♦ Make sure cut off the power supply when installing or uninstalling the extension card.

Naming rule

<u>XD</u>- <u>2 AD 2 PT</u> - <u>A</u> - <u>ED</u>



XD: XD series extension module

Analog input channel: 2: 2 channels

AD: analog input

Temperature input channel: 2: 2 channels

Temperature input PT: PT100 temperature input

A: current type for input

Module type ED: left extension ED module

■ Basic parameters

XD series PLC can connect 1 extension ED module, the type is not limited.


Table 1: analog extension module XD-2AD2PT-A-ED general specifications


Item	Specifications
Using environment	No corrosive gas
Environment temperature	0°C~60°C
Storage temperature	-20~70°C
Environment humidity	5~95%RH
Storage humidity	5~95%RH
Installation	Fix with M3 screw or install on the rail DIN46277(width
	35mm)
Dimension	100.0mm×18.0mm×90.0mm

Table 2: analog extension module XD-2AD2PT-A-ED I/O precision

able 2. analog extens	sion module AD-2/AD21 1-/A-E	b 1/0 precision
Item	Analog current input (mA)	Temperature input (PT)
Analog input	0.20.4.20.4	'0,
range	0~20, 4~20mA	- O _X
Temperature		-100~500°C
input range	_	-100~300 C
Max input range	0~40mA	_
Digital output	12-bit binary number	-1000~5000
range	(0~4095)	
Resolution	1/4095(12Bit)	0.1°C
integrated	1%	±0.8% of the full scale
precision		
Transformation	2ms/1 channel	2ms/1 channel
speed		
Power supply for	DC24V	±10%, 150mA
analog		

Table 3: analog extension module XD-2AD2PT-A-ED AD transformation diagram

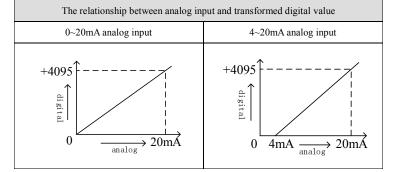


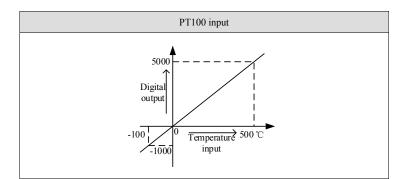

Product appearance

Here listed I/O terminal configurations of XD series extension module XD-2AD2PT-A-ED.

Product structure

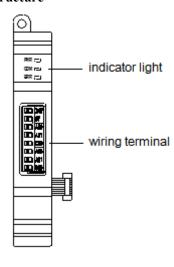

Each part name:

Name	:	Function
	PWR	The LED lights when the ED module has power supply
Indicator	COM	The LED lights when the ED module communication
light		port works well
(,,	ERR	The LED lights when the ED module has error
0	24V	ED module external power supply 24V +
· C	0V	ED module external power supply 24V -
	AI0	Channel 1 analog input
Wiring	AI1	Channel 2 analog input
terminal	CI0	AI0, AI1 ground
	A0	Channel 1 PT100 input
	Al	Channel 2 PT100 input
	C0	PT1, PT2 ground

Product dimension and installation


Installation

Do not install the module in below environment:

- Direct sunlight
- Environment temperature out of range 0-50°C
- Environment humidity out of range 35%-85% RH
- Condensation as severe changes in temperature
- · Corrosive gas and flammable gas
- Dust, iron filing, salt, fume
- Vibration and impact
- · Spray oil, water and medicine • Strong magnetic field and strong electric field


XD series extension ED module can be installed in com3 port of XD series PLC.

Note: please cut off the power before operation!

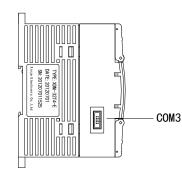

■ **Product dimension** (Unit: mm)

XD series extension ED module dimension is shown as below

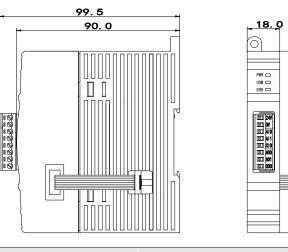


Electric design reference


■ I/O address

XD series extension ED module will not occupy I/O unit, the transformed value is stored in PLC register. The following is the PLC register corresponding to each channel

Channel	AD signal
0CH	ID30000
1CH	ID30001
Channel	PT signal
Channel 0CH	PT signal ID30002

Working mode setting

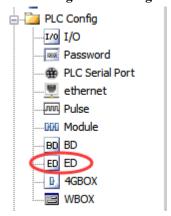

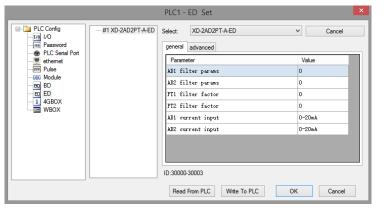

Stens:

- 1. open the XDPpro software, find the left project bar, click PLC config/ED.
- 2. choose the correct module type.
- 3. set the module parameters such as current input range.
- 4. click write to PLC, then re-power on the PLC to make the setting effective.

 
Note: first-order low-pass filtering weighted this sampled value with last filter output value, and got the effective filtering value. The filter coefficient is set by user, the range is 0-254, 0 means no filter.

■ External connection


Please pay attention to below items when wiring:

- ① please use shield cable to avoid interference, and single point connect to ground for the shield layer.
- 2 when XD-2AD2PT-A-ED connects external + 24V power supply, please choose the power supply from PLC to avoid interference.


◆ Current single-ended input



XD-2AD2PT-A-ED current input wiring:

 

♦ PT100 temperature input

 


Programming example

Example: it needs to collect one channel pressure sensor signal (pressure sensor performance parameter: pressure range 0Mp~10Mp, output signal range 4~20mA), and real-time read one channel of PT100 temperature signal.

Analysis: as the pressure sensor testing range is $0Mp\sim10Mp$, and related analog output is $4\sim20mA$, the ED module AD transformation range is $0\sim4095$. So $0Mp\sim10Mp$ is related to digital range $0\sim4095$. 10Mp/4096=0.0024414 is the pressure value related to digital value 1.

So the real-time pressure=ID register value *0.0024414. For example, ID register value is 1024, so the pressure is 2.5Mp.

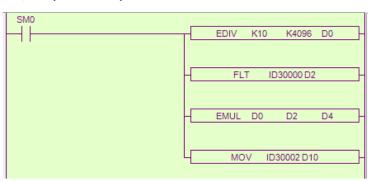

Note: please use floating number for calculation, otherwise the calculation precision will be error!

Explanation:

SM0 is normally ON coil, it will be ON when PLC is running.

PLC will calculate the pressure value P related to digital value 1, then transform the ID30000 value to floating number. So the real-time pressure=ID30000*P.

Note: In this example, please set ON channel 1 and 3 enable bit Y30000, Y30002.

